GSIF Plug-In Mode Routing with Hardware Re-Sampling

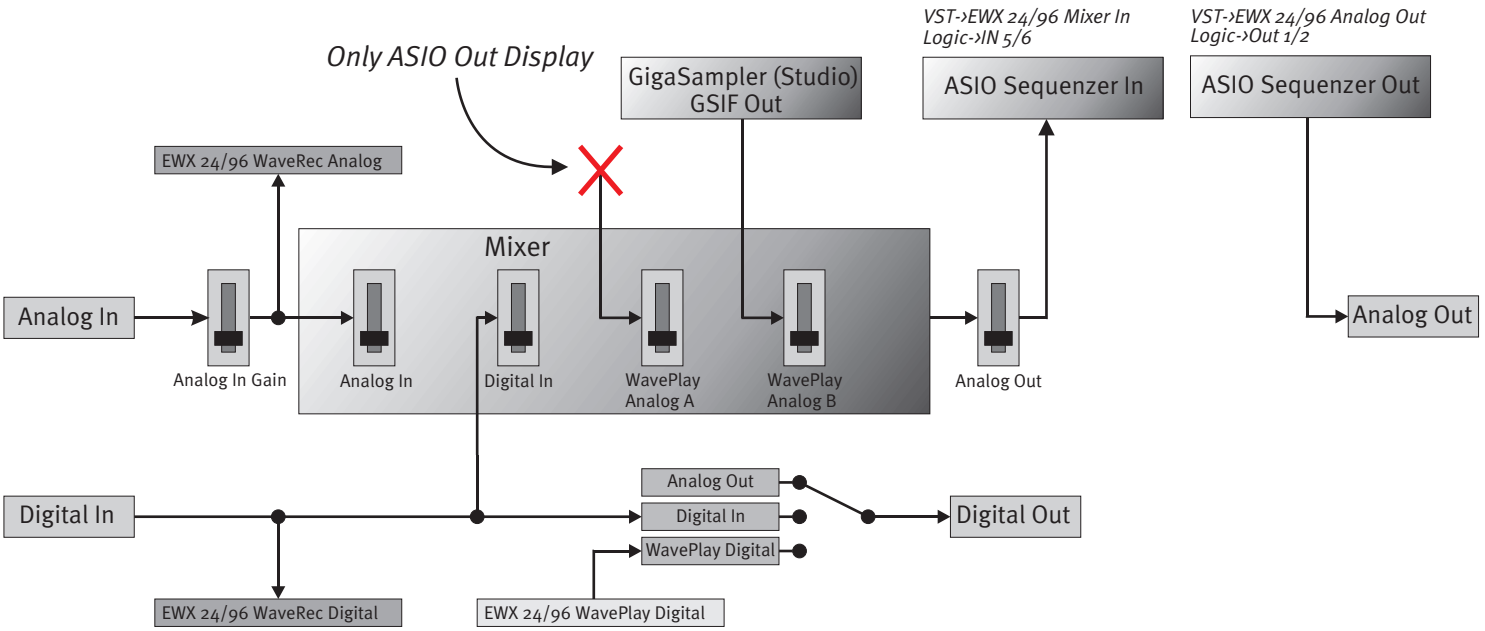

Please note:
GigaSampler LE only
supports 16 Bit resolution

Always start GigaSampler (Studio) first and start your Sequenzer by using the special button within GigaSampler (Studio).